



PowerCut™ 700

PT-39



Instruction manual



DECLARATION OF CONFORMITY

According to

The Low Voltage Directive 2006/95/EC, entering into force 16 January 2007

The EMC Directive 2004/108/EC, entering into force 20 July 2007

Type of equipment

Plasma Cutting Power Source

Type designation

PowerCut™ 700, from serial number 248 xxx xxxx (2012 w.48)

Brand name or trade mark

ESAB

Manufacturer or his authorized representative established within the EEA:

Name, address, phone, website:

ESAB AB

Lindholmsallén 9

Box 8004, 402 77 GÖTEBORG, Sweden

Phone: +46 31 509 000

Website: www.esab.com

The following harmonized standards, in force within the EEA, has been used in the design:

EN 60974-1, Arc welding equipment – Part 1: Welding power sources

EN 60974-10, Arc welding equipment – Part 10: Electromagnetic compatibility (EMC) requirements

Additional information:


Restrictive use, Class A equipment, intended for use in locations other than residential.

By signing this document, the undersigned declares as manufacturer, or the manufacturer's authorized representative established within EEA, that the equipment in question complies with the safety requirements stated above.

Date

2012-11-21

Signature



Jerker Funnemark
Clarification

Position

Managing Director
Equipment & Automation



DECLARATION OF CONFORMITY

According to
The Low Voltage Directive 2006/95/EC, entering into force 16 January 2007

Type of equipment
Plasma Cutting Torch

Type designation
PT-39

Brand name or trade mark
ESAB

Manufacturer or his authorised representatives established within the EEA:

Name, address, telephone no., website:
ESAB AB
Lindholmsallén 9
Box 8004, 402 77 Göteborg, SWEDEN
Phone: +46 31 509 000, Website: www.esab.com

The following harmonised standard in force within the EEA has been used in the design:
EN 60974-7, Arc welding equipment – Part 7: Torches

Additional information:

Restrictive use. These torches are used with Class A type of equipment, intended for use in locations other than residential.

By signing this document, the undersigned declares as manufacturer, or the manufacturer's authorised representative established within EEA, that the equipment in question complies with the safety requirements stated above.

Date

21-nov-2012

Signature



Jerker Funnemark
Clarification

Position

Managing Director
Equipment and Automation




APPLICATIONS	24
1 SAFETY	6
2 INTRODUCTION	8
2.1 Equipment	8
3 TECHNICAL DATA	8
4 INSTALLATION	9
4.1 Delivery check and location	10
4.2 Primary power supply	11
4.3 Input air connection	12
4.4 Connection for return cable	12
4.5 Connection of torch	13
4.5.1 Disconnecting the Torch	14
4.5.2 Connecting the Torch	14
5 OPERATION	15
5.1 Connections	15
5.2 Control devices	16
5.2.1 Symbol key	17
5.3 Installing consumables for the torch	18
5.4 Cutting	19
6 MAINTENANCE	20
6.1 Inspection and cleaning	21
7 TROUBLESHOOTING	21
7.1 Troubleshooting guide	22
8 ORDERING SPARE PARTS	23
DIAGRAM	24
WEAR PARTS	27
ORDER NUMBER	28

1 SAFETY


Users of ESAB equipment have the ultimate responsibility for ensuring that anyone who works on or near the equipment observes all the relevant safety precautions. Safety precautions must meet the requirements that apply to this type of equipment. The following recommendations should be observed in addition to the standard regulations that apply to the workplace.

All work must be carried out by trained personnel well-acquainted with the operation of the equipment. Incorrect operation of the equipment may lead to hazardous situations which can result in injury to the operator and damage to the equipment.

1. Anyone who uses the equipment must be familiar with:
 - its operation
 - location of emergency stops
 - its function
 - relevant safety precautions
 - welding and cutting
2. The operator must ensure that:
 - no unauthorised person is stationed within the working area of the equipment when it is started up.
 - no-one is unprotected when the arc is struck
3. The workplace must:
 - be suitable for the purpose
 - be free from drafts
4. Personal safety equipment
 - Always wear recommended personal safety equipment, such as safety glasses, flame-proof clothing, safety gloves.
 - Do not wear loose-fitting items, such as scarves, bracelets, rings, etc., which could become trapped or cause burns.
5. General precautions
 - Make sure the return cable is connected securely.
 - Work on high voltage equipment **may only be carried out by a qualified electrician.**
 - Appropriate fire extinguishing equipment must be clearly marked and close at hand.
 - Lubrication and maintenance must **not** be carried out on the equipment during operation.



WARNING



Arc welding and cutting can be injurious to yourself and others. Take precautions when welding and cutting. Ask for your employer's safety practices which should be based on manufacturers' hazard data.

ELECTRIC SHOCK - Can kill

- Install and earth the unit in accordance with applicable standards.
- Do not touch live electrical parts or electrodes with bare skin, wet gloves or wet clothing.
- Insulate yourself from earth and the workpiece.
- Ensure your working stance is safe.

FUMES AND GASES - Can be dangerous to health

- Keep your head out of the fumes.
- Use ventilation, extraction at the arc, or both, to take fumes and gases away from your breathing zone and the general area.

ARC RAYS - Can injure eyes and burn skin.

- Protect your eyes and body. Use the correct welding screen and filter lens and wear protective clothing.
- Protect bystanders with suitable screens or curtains.

FIRE HAZARD

- Sparks (spatter) can cause fire. Make sure therefore that there are no inflammable materials nearby.


NOISE - Excessive noise can damage hearing

- Protect your ears. Use earmuffs or other hearing protection.
- Warn bystanders of the risk.

MALFUNCTION - Call for expert assistance in the event of malfunction.


Read and understand the instruction manual before installing or operating.

PROTECT YOURSELF AND OTHERS!




WARNING


Do not use the power source for thawing frozen pipes.



CAUTION


Class A equipment is not intended for use in residential locations where the electrical power is provided by the public low-voltage supply system. There may be potential difficulties in ensuring electromagnetic compatibility of class A equipment in those locations, due to conducted as well as radiated disturbances.

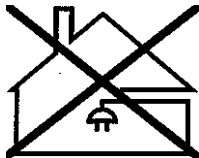





CAUTION


This product is solely intended for plasma cutting.



CAUTION

Read and understand the instruction manual before installing or operating.



Dispose of electronic equipment at the recycling facility!

In observance of European Directive 2002/96/EC on Waste Electrical and Electronic Equipment and its implementation in accordance with national law, electrical and/or electronic equipment that has reached the end of its life must be disposed of at a recycling facility.

As the person responsible for the equipment, it is your responsibility to obtain information on approved collection stations.

For further information contact the nearest ESAB dealer.

ESAB can provide you with all necessary cutting protection and accessories.

2 INTRODUCTION

The **PowerCut 700** is a complete system for manual plasma cutting. It delivers cutting power for severing materials up to 20 mm thickness.

2.1 Equipment

The power source is supplied with:

- power cable, 3 m
- instruction manual
- return cable with clamp
- plasma cutting torch PT-39, 7.5 m, supplied as indicated on page [28](#)
- wear part kit for PT-39.

3 TECHNICAL DATA

PowerCut 700	
Mains voltage	400 V \pm 10 %, 3-ph, 50/60 Hz
Setting range	30 – 50 A
Permitted load	
30 % duty cycle	50 A
60 % duty cycle	37 A
100% duty cycle	30 A
Power factor at max current	0.75
Efficiency at maximum current	85 %
Open-circuit voltage U_0	320 V
Operating temperature	-10 to 40 °C
Transportation temperature	-20 to 55 °C
Sound pressure at no load	< 70 db (A)
Nominal flow rate	189 l/min at 4.8 bar
Dimensions, l x w x h	600 x 210 x 380 mm
Weight incl torch and return cable	25.5 kg
Insulation class transformer	H
Enclosure class	IP 23
Application class	S




Duty cycle

The duty cycle refers to the time as a percentage of a ten-minute period that you can weld or cut at a certain load without overloading. The duty cycle is valid for 40°C.

Enclosure class

The IP code indicates the enclosure class, i. e. the degree of protection against penetration by solid objects or water. Equipment marked **IP23** is designed for indoor and outdoor use.

Application class

The symbol  indicates that the power source is designed for use in areas with increased electrical hazard.

4 INSTALLATION

The installation must be carried out by a professional.

Correct installation is very important for trouble-free operation and good cutting results. Carefully read and follow each step in this chapter.



WARNING

ELECTRIC SHOCKS CAN KILL Take precautionary measures against electric shocks. Ensure that all power supplies are disconnected – switch off the switch at the wall socket and pull out the equipment's power cable from the socket before making any electrical connections in the power source.



WARNING

It is very important that the chassis is connected to the approved electric protective earth, to prevent electric shocks and electrical accidents. Ensure that protective earth is not connected to any phase conductors by mistake.



WARNING

Poor connections or failure to connect the return cable to the workpiece can result in fatal electric shock.



WARNING

Air filter devices may not be used – installation or mounting of any form of air filter device obstructs the cold air flow and causes a risk of overheating. The warranty is invalidated if any type of air filter is used.

**WARNING**

*Do NOT start the equipment with the cover removed.
Do NOT connect the power source with the main switch in ON position
or when you are holding it or carrying it.
Do NOT touch any of the torch's parts when the power supply is on.*

**CAUTION**

*This product is intended for industrial use. In a domestic environment this product may
cause radio interference. It is the user's responsibility to take adequate precautions.*

**CAUTION**

*Place the power source at least 3 metres from the cutting area as sparks and slag spray
can damage the power source*

4.1 Delivery check and location


1. Remove the packaging. Inspect the equipment for damage that was not immediately apparent upon reception of the delivery. Immediately report any damage to the delivery company.
2. Check for any loose parts in the packaging. Check that the air ducts in the cover's rear panel are not blocked by packaging material that can prevent the air flow through the power source.

The power source has a carrying handle and can be lifted easily.

3. Position the power source so that its cooling air inlets and outlets are not obstructed. Minimum permitted distance to wall or other obstruction is 1 m.
4. An air source that gives clean and dry air, at least 189 l/m at 4.8 bar, is required for cutting. The cutting air pressure must not exceed 6 bar, which is the maximum inlet pressure for the filter regulator that is included in the delivery.

4.2 Primary power supply

Make sure that the power source is connected to the correct supply voltage and that it is protected by the correct fuse rating. A protective earth connection must be made in accordance with regulations.

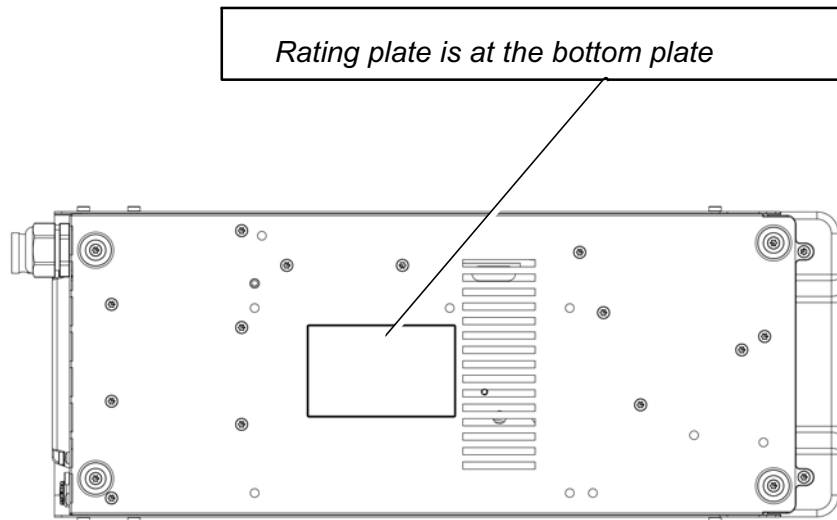

WARNING

Make sure the power source is switched off before removing the fuse.

Recommended fuse sizes and minimum cable area

Powercut 700	
Mains voltage	400 V 3-ph
Mains cable area	4G2.5
Phase current $I_{1\text{eff}}$	6.5 A
Fuse, anti-surge	16 A

NOTE! The mains cable areas and fuse sizes as shown above are in accordance with Swedish regulations. Use the power source in accordance with the relevant national regulations.

Supply from power generators

The power source can be supplied from different types of generators. However, some generators may not provide sufficient power for welding. Generators with AVR, equivalent or better type of regulation with a min rated power of 10.8 kW are recommended to supply the power source within it's full capacity.

Start with generator:

- 1) Start the generator
- 2) Turn on the power source by mains switch ON

Stop with generator


- 3) Turn off the power source by mains switch OFF
- 4) Stop the generator

4.3 Input air connection


Connect your air supply to the inlet connection of the filter. Any cylinder of compressed air or air from a compressor may be used. The air must be free from polluting particles. A pressure regulator is provided to ensure the correct air flow rate on the torch. Set the pressure with the knob on the top of the regulator.

4.4 Connection for return cable

Clamp the return cable to the workpiece. Be sure the workpiece is connected to an approved earth ground with a properly sized ground cable.

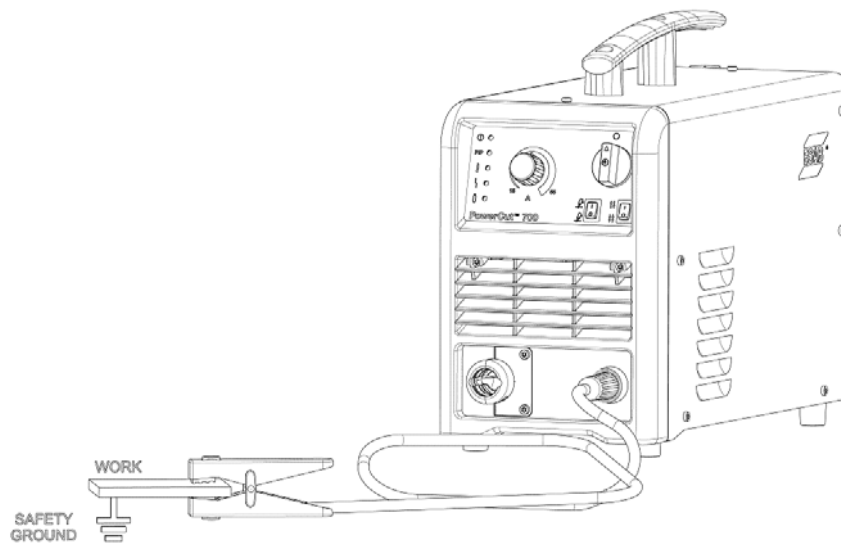

4.5 Connection of torch

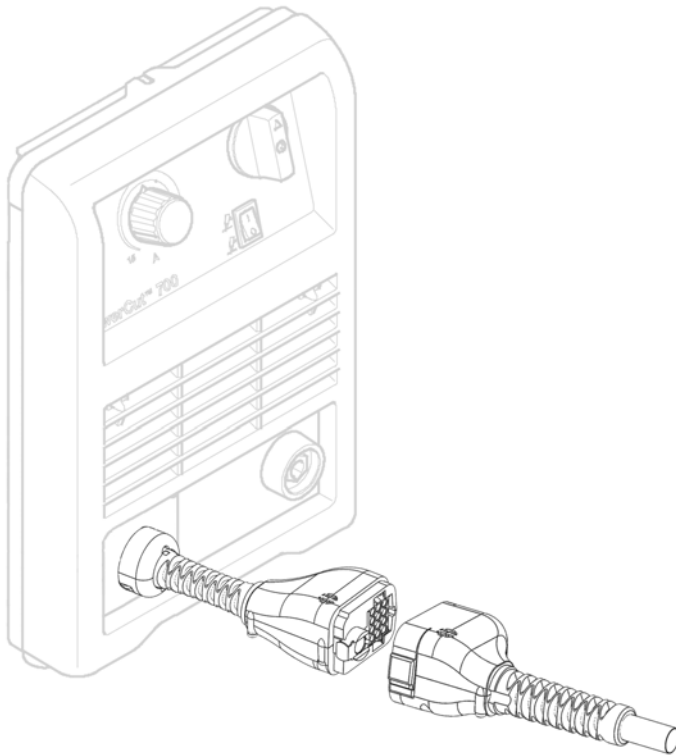

To allow quick and easy separation of the torch from the power supply, the Power Cut 700 is equipped with a unique quick disconnect solution.

Before connecting or disconnecting the torch, there are some safety rules to keep in mind.

- If the connector is loose or damaged, the system should not be operated until it has been repaired by a qualified professional. Always make sure that the connection is firm and properly locked in place.
- Never, under any circumstances, disconnect the torch while the equipment is on. The system should be unplugged, or otherwise disconnected from power, prior to servicing.
- Users should never pull the power supply by its cables, or do anything that might damage the cable or connector. The connector is designed to withstand wear from regular use, but excessive abuse can render the connector unusable.
- Like the power supply itself, the connector should never be operated in or near standing water. Additionally, if the connector's silicon moisture seal is absent or damaged, users should not operate the system.
- The gas connection is lubricated to ensure a smooth connection, but the electrical connector should never be lubricated. Users should take care to keep the electrical connections clean and dry.



4.5.1 Disconnecting the Torch

Always obey the safety rules above.

1. Disconnect the power at the wall or unplug the power supply.
2. Press the nylon tab on the torch-side connector.
3. Pull the two halves apart while keeping the tab depressed.

4.5.2 Connecting the Torch

Always obey the safety rules above.


1. Disconnect the power at the wall or unplug the power supply.
2. Press the release button on the female gas connector to ensure that the locking mechanism is not engaged.
3. Align the gas connectors and engage them.
4. Align the electrical connections and engage them.
5. Press the two halves together until a click sound indicates that the gas connectors are locked together.
6. Tug lightly on the connector to ensure that it is properly locked in place.

5 OPERATION

General safety regulations for handling the equipment can be found on page 6. Read through before you start using the equipment!


5.1 Connections

- | | | | |
|---|--|---|----------------------------------|
| 1 | Connection for air | 4 | Connection for torch |
| 2 | Connection for power cable | 5 | Control devices, see chapter 5.2 |
| 3 | Connection for return cable with clamp | 6 | Fuse. |

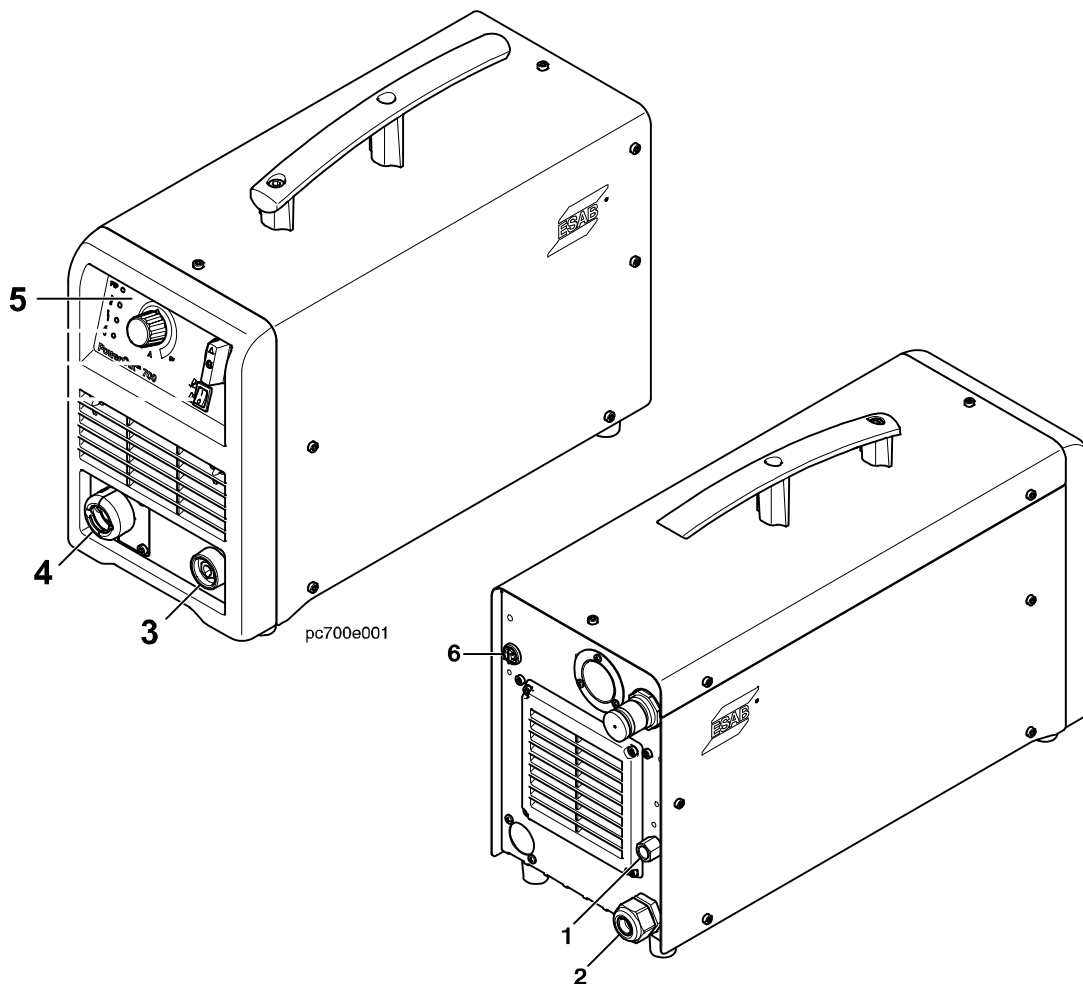

5.2 Control devices

- | | | | |
|---|--------------------------------|---|------------------------------------|
| 1 | Power switch 0/1 | 5 | Over temperature indicator, yellow |
| 2 | 2/4 stroke | 6 | Parts in Place (PIP), yellow |
| 3 | Air pressure indicator, yellow | 7 | Power ON indicator, green |
| 4 | Fault indicator, yellow | 8 | Output current control |

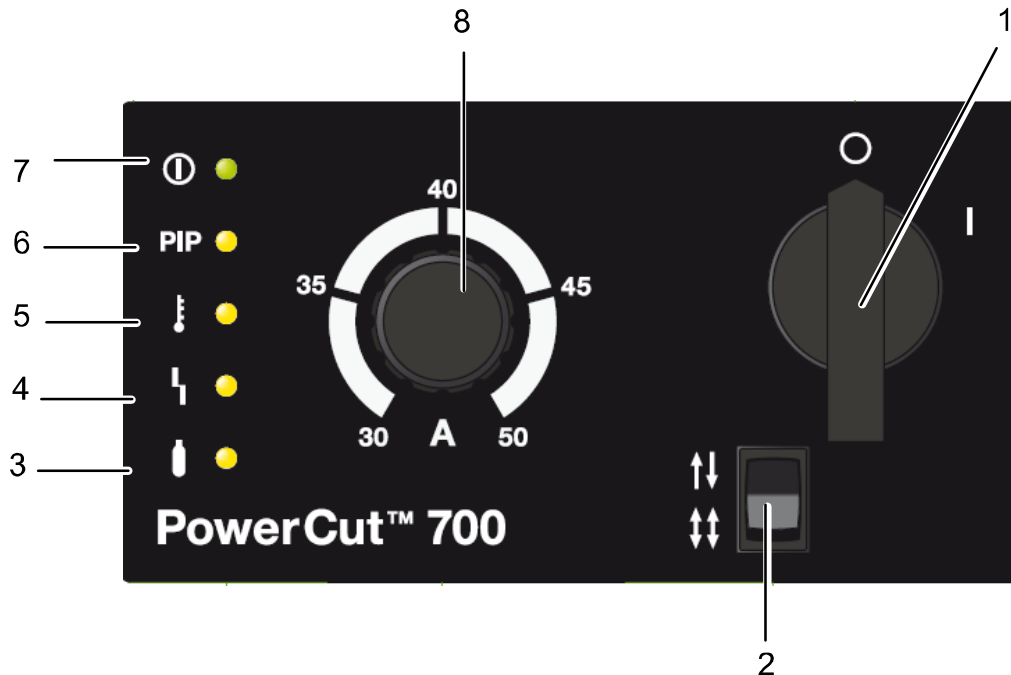

1 Power switch

Turn the knob clockwise to “1” position for normal operation. Turn the knob anti-clockwise to “0” to switch off the power source.

2 2/4 stroke

When in 2-stroke cutting mode, the torch activates when the trigger is pressed, and deactivates when the trigger is released. In 4-stroke mode, the torch activates on the first trigger press, after which it can be released for increased comfort during long cuts. The torch is then deactivated by pressing the trigger again.

3 Air Pressure Indicator

The yellow LED indicates that the air pressure is too low.

4 Fault Indicator

The flashing yellow LED indicates that the safety switch for the cover is activated and the power is automatically turned off.

5 Over Temperature Indicator

When the yellow LED is lit, the working temperature has exceeded the normal values. It is turned off when the temperature is normal.



6 Parts in Place (PIP)

When the yellow LED is lit, it indicates that there is a parts-in-place error. This means that no nozzle was detected, or that the electrode is not retracting properly. Turn off the power. Check that the components are properly assembled, that they are free from excessive damage, and that the electrode can slide back and forth with comfortable pressure from one finger. Once the source of the error has been corrected, turn on the power again.







7 Power ON Indicator

When the green LED is lit, it indicates that the power is on.

8 Output current control

Adjustable from 30 to 50 A. For settings see cut data charts in the torch manual.


5.2.1 Symbol key

	Power		Air
	Temperature		Fault
PIP	Parts in Place		2-stroke
	4-stroke		

5.3 Installing consumables for the torch

Proper use of the torch within rated operating conditions (especially arc current and gas flow rate) and correct installation of consumable parts can prevent unnecessary torch damage.

1. Tighten electrode and retaining/shield cup fully at each consumable change or inspection.
2. Check consumable tightness at the beginning of each work period, even if everything was working normally at the end of the previous period.

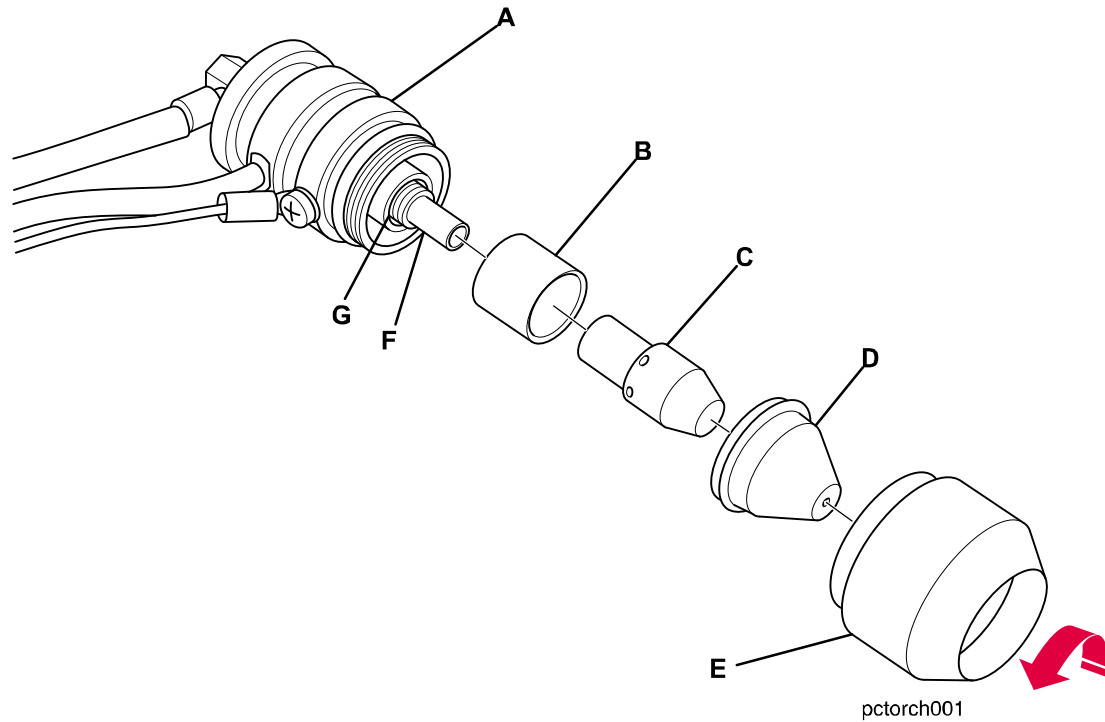



- A *Torch body assembly*
- B *Baffle*
- C *Electrode*
- D *Nozzle*
- E *Retaining/Shield cup*
- F *Piston*
- G *Electrode/Torch body seat*

See wear parts on page [27](#).




5.4 Cutting

1. Set the switch (wall socket or similar) to on.
2. Check that the compressor is connected to the power source.
3. Set the power switch to I (On).
4. After starting the cut, the torch should be maintained at a 5 - 15° forward angle. This angle is especially useful in helping to create a “drop” cut. The torch can be operated with the nozzle dragging on the plate or with up to 6.35 mm standoff. The ideal standoff is 3.2 mm. Standoff guides are available to simplify maintaining the gap, see wear parts on page [27](#).

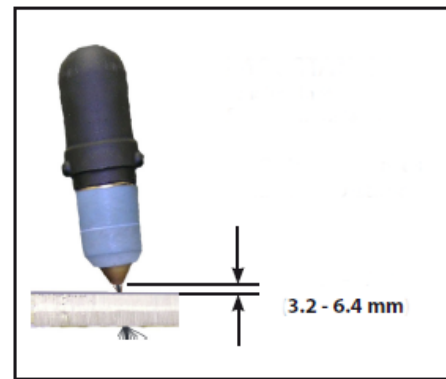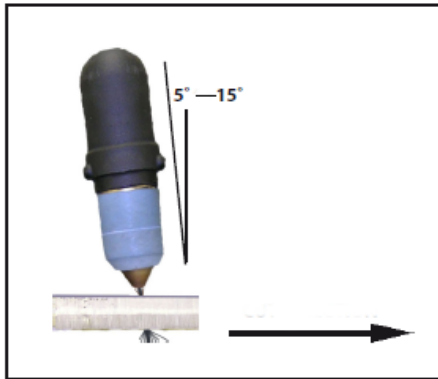

5. Depress the torch switch. Air should flow from the torch nozzle.
6. Two seconds after depressing the torch switch, the pilot arc should start. The main arc should immediately follow, allowing the cut to begin. (If working in the 4-stroke mode, the torch switch may be released after establishing the cutting arc.)
7. To start a cut, tilt the torch to prevent molten material from splashing back and damaging the torch. When the arc breaks through the workpiece, bring the torch to an upright position and proceed to cut.

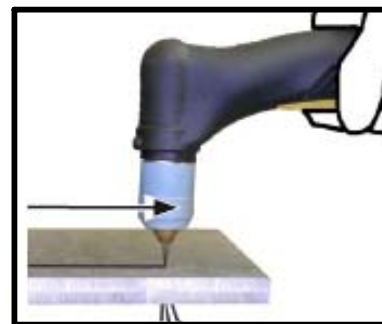

8. When ending a cut, the torch switch should be released and the torch lifted off the workpiece immediately upon completion of the cut. This is to prevent the pilot arc from re-igniting after the cutting arc has extinguished and causing damage to the nozzle (double arcing).
9. For rapid re-starts on machines that support grate cutting mode, do not release the torch switch. The torch will automatically return to pilot arc mode after each cut and transfer back to main arc, when the torch is positioned over the next working surface. When working without grate cutting mode, simply release and re-press the trigger during the postflow to restart the arc without a delay for preflow.

Speed

Typically, manual plasma cutting speeds are limited by the sever speed. This indicates the maximum speed you will be able to move the torch along the cut while still penetrating the work piece. However, for applications that require a cleaner cut, it may be important to cut closer to the quality speed.

If the cut is made too quickly, significant quantities of molten metal can form dross on the underside of the cut. While most slag formed from carbon steel will easily chip off, it can be a nuisance. Quality speeds are selected to keep dross formation to a minimum.

On page 26 data shows the maximum cutting speeds possible for the power source at 30 - 50A. Quality cut speed recommendations are also listed for steel.

Note that when the torch is used at its limits, the quality of the cut suffers.

6 MAINTENANCE

Regular maintenance is important to get the optimal performance and lifetime.

Only those persons who have appropriate electrical knowledge (authorized personnel) may remove the safety plates.



WARNING

Ensure that the mains voltage supply to the power source has been disconnected externally. Switch off the switch at the wall socket before inspecting or working in the power source.



WARNING

Water or oil can collect in the compressed air lines. Always direct the first stream of air away from the equipment, to prevent damage.



CAUTION

All guarantee undertakings from the supplier cease to apply if the customer attempts any work to rectify any faults in the product during the guarantee period.

If the equipment does not work correctly, stop work immediately and determine the cause of the problem. Maintenance work may only be carried out by persons with the applicable knowledge. Electrical work may only be carried out by authorised electricians. Never allow persons other than those with the applicable knowledge to check, clean or repair the equipment. Use only ESAB original spare and wear parts.



6.1 Inspection and cleaning

The following points on the power source should be checked and/or cleaned regularly.

1. Check the return cable connection to the work piece.
2. Check that the protective earth from the work piece is securely connected to the power source chassis earth.
3. Check the torch heat shield. Replace it if it is damaged.
4. Check the electrode and the nozzle for wear daily. Remove any splash, replace the electrode and nozzle as necessary. If the electrode has pitting which is more than 3.2 mm deep at its centre, it must be replaced. If the electrode is used beyond this recommended wear limit, damage to the torch and power source may occur. Nozzle life is also greatly reduced when using the electrode below the recommended limit.
5. Check that the cables or hoses are not damaged or bent.
6. Check that all plugs and connections and ground terminals are firmly connected.
7. Ensure that all incoming power supplies are disconnected. Use goggles and face mask and blow clean the power source internally using dry compressed air at low pressure .
8. Regularly drain any water from the filter below the air regulators.

7 TROUBLESHOOTING



WARNING

ELECTRIC SHOCKS CAN KILL! Ensure that the mains voltage supply to the power source has been disconnected externally. Switch off the switch at the mains socket before inspecting or working in the power source.



WARNING

Plasma cutting equipment uses extremely high voltages that can cause severe injury or even death. Observe extreme caution when working with the covers removed.

Try these recommended checks and inspections before sending for an authorized service technician.

Type of fault	Corrective action
Insufficient penetration	<ul style="list-style-type: none"> • Current too low • Cutting speed too fast • Damaged cutting nozzle • Improper air pressure • Low air flow rate
Main arc extinguishes.	<ul style="list-style-type: none"> • Cutting speed too slow • Worn electrode

Type of fault	Corrective action
Dross formation (In some materials and thicknesses it may be impossible to get dross-free cuts.)	<ul style="list-style-type: none"> • Current too low • Cutting speed too fast or too slow • Improper air pressure • Faulty nozzle or electrode • Low air flow rate
Double arcing (Damaged nozzle orifice)	<ul style="list-style-type: none"> • Low air pressure • Damaged cutting nozzle • Loose cutting nozzle • Heavy spatter accumulation on nozzle
Uneven arc	<ul style="list-style-type: none"> • Damaged cutting nozzle or worn electrode
Unstable cutting conditions	<ul style="list-style-type: none"> • Incorrect cutting speed • Loose cable or hose connections • Electrode and/or cutting nozzle in poor condition
Main arc does not strike.	<ul style="list-style-type: none"> • Worn electrode • Loose connections • Work cable not attached
Poor consumable life	<ul style="list-style-type: none"> • Improper gas pressure • Contaminated air supply • Low air flow rate

7.1 Troubleshooting guide

Problem	Cause	Solution
The ON/OFF switch is in position 1, but the green LED (power) does not light up.	<ul style="list-style-type: none"> • There is no power present. • Tripped circuit breaker 	<ul style="list-style-type: none"> • Check the power supply. • Check the breaker.
The power source is on, but the yellow AIR PRESSURE LED remains lit.	<ul style="list-style-type: none"> • The air pressure is low. • No air is present 	<ul style="list-style-type: none"> • Increase the air pressure. • Check if air is supplied.
The power source is on, but the yellow OVER TEMPERATURE LED remains lit.	<ul style="list-style-type: none"> • The power source is still overheated. It will cool down sooner with the fan on. • The thermal switch is faulty. 	<ul style="list-style-type: none"> • Switch on the power source and wait a few minutes before working again. • Call authorized service technicians.
The power source is on, the orange FAULT LED remains lit.	<ul style="list-style-type: none"> • The power source is not enabled. A safety switch, cover, has been activated. 	<ul style="list-style-type: none"> • Check if the consumables are in place and properly tightened. • Check that the side panel has been correctly closed (torch connector inspection side).
The power source is on, the yellow PIP LED remains lit.	<ul style="list-style-type: none"> • There is a parts-in-place error. 	<ul style="list-style-type: none"> • Check if the consumables are in place and properly tightened.

Problem	Cause	Solution
The thermal switch trips during cutting.	<ul style="list-style-type: none"> The power required by the power source has exceeded the power available from the incoming line voltage. Another appliance is working on the same line. 	<ul style="list-style-type: none"> Reduce the cutting current with the command on the front panel or reduce the cutting time. Reduce the length of the connecting cable or increase the cable section. Do not connect other appliances to the same line.
The arc does not strike or the arc disappears during cutting.	<ul style="list-style-type: none"> The wear parts of the torch are worn. The power module is overheated. There is not sufficient air pressure. There is low voltage on the incoming line. 	<ul style="list-style-type: none"> Check the torch and fit spare parts if necessary. See if the yellow OVER TEMPERATURE LED on the front panel is lit. Wait until the power source cools down. See if the yellow AIR PRESSURE LED on the front panel is lit. Increase the air pressure. Check the incoming line. If an extension is being used, ensure that the cable section is adequate.
The pilot is working but there is not sufficient current for cutting.	<ul style="list-style-type: none"> Bad contact of the earth clamp Bad connection of the positive pole at the torch cable 	<ul style="list-style-type: none"> Check that the earth clamp has a good contact with the piece to be cut. Check the connection of the positive pole at output to the socket, even on the inside.
The cut is not perpendicular.	<ul style="list-style-type: none"> Worn electrode or nozzle 	<ul style="list-style-type: none"> Replace the electrode and the nozzle.


8 ORDERING SPARE PARTS


Repair and electrical work should be performed by an authorised ESAB service technician. Use only ESAB original spare and wear parts.

PowerCut 700 is designed and tested in accordance with the international and European standards **EN 60974-1, EN 60974-10**. It is the obligation of the service unit which has carried out the service or repair work to make sure that the product still conforms to the said standard.


PT-39 is designed and tested in accordance with the international and European standard **EN 60974-7**. It is the obligation of the service unit which has carried out the service or repair work to make sure that the product still conforms to the said standard.

Spare parts may be ordered through your nearest ESAB dealer, see the last page of this publication.

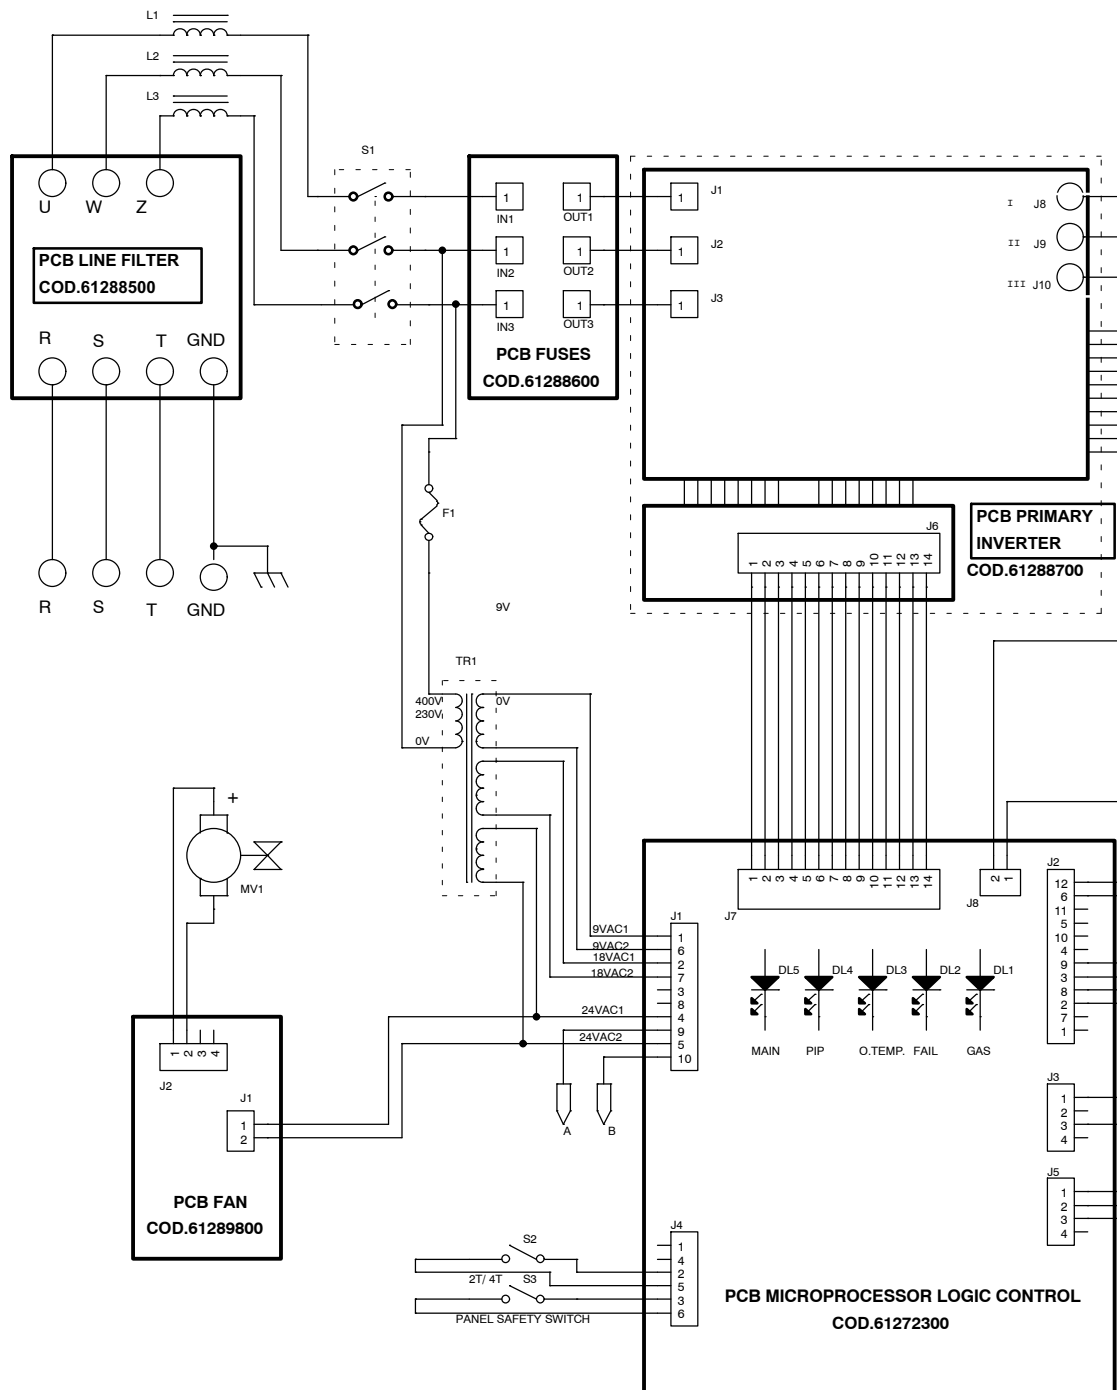


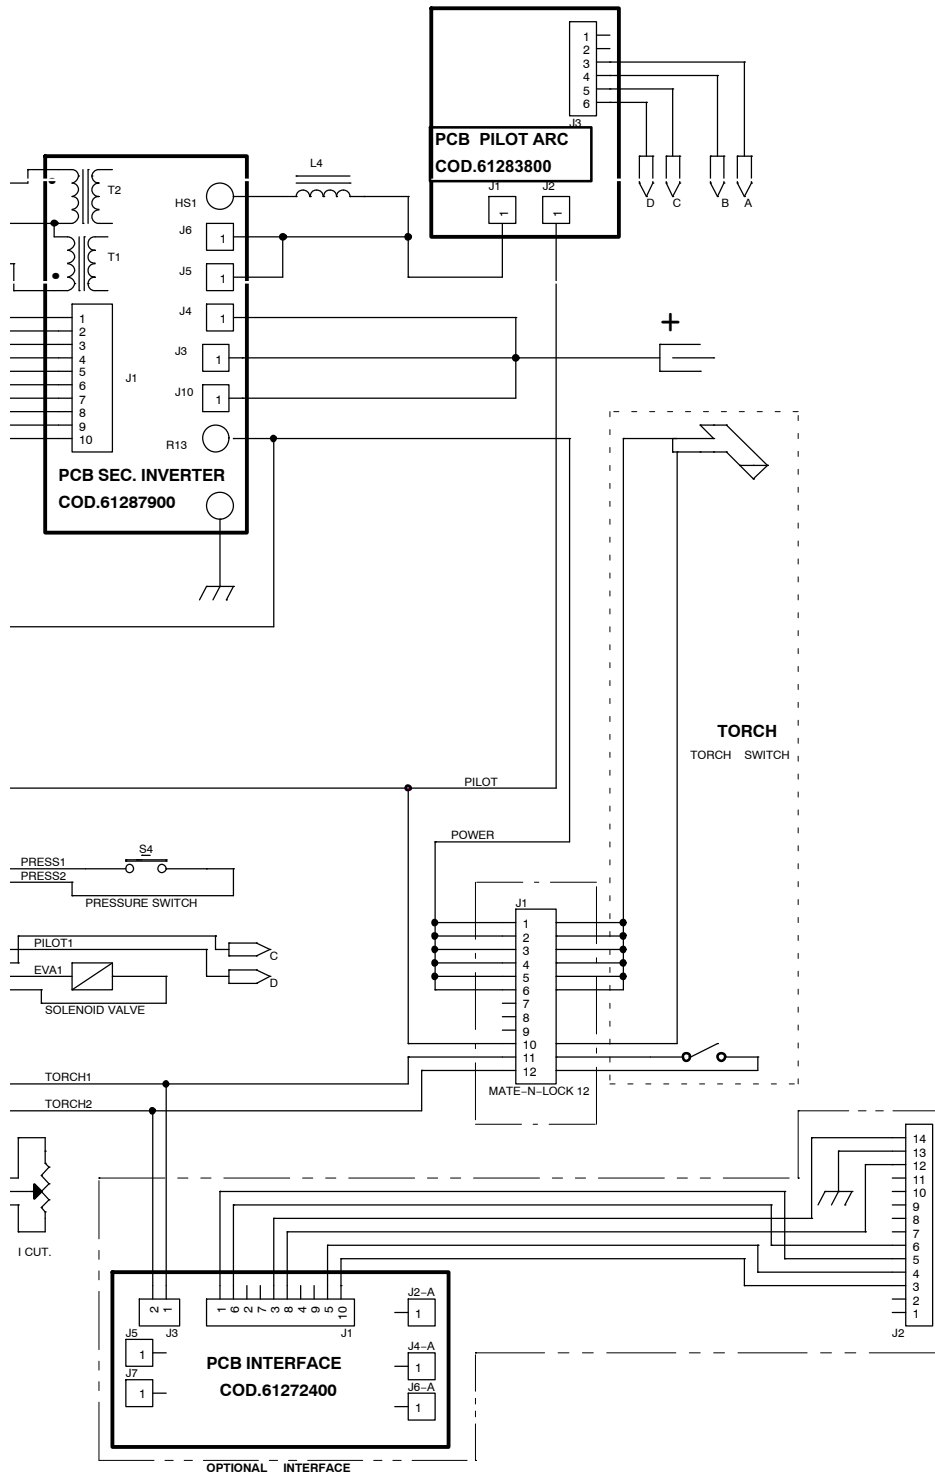

Stainless Steel and Aluminium Cut Speeds

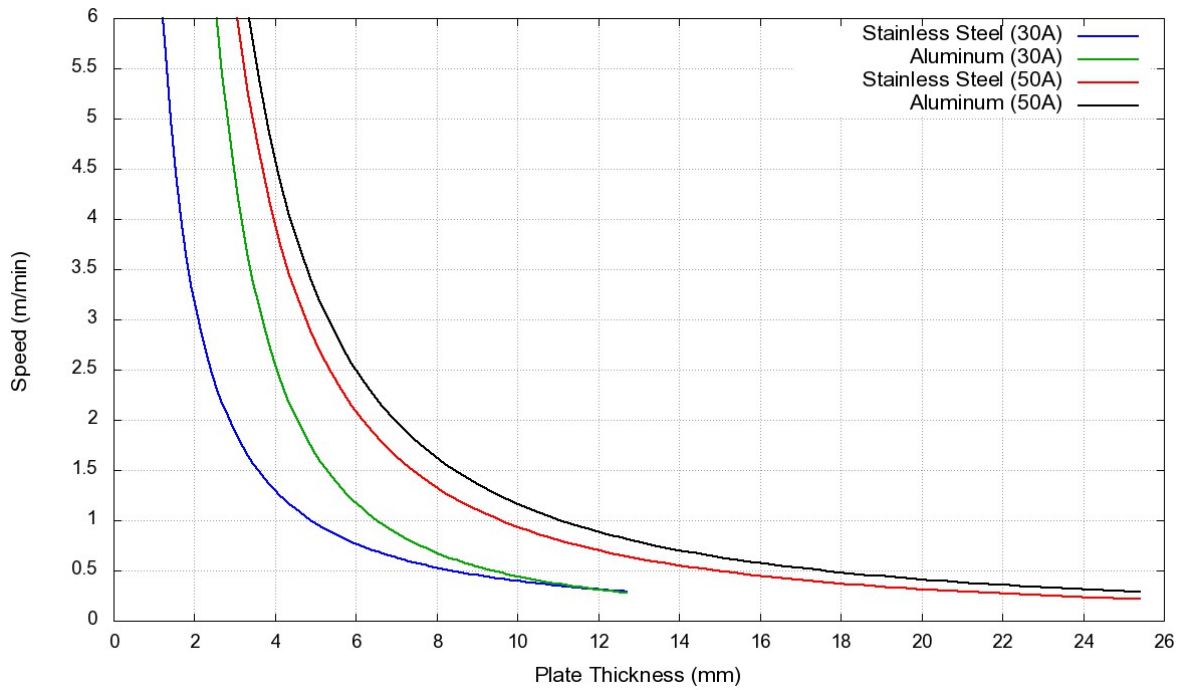


Carbon Steel Cut Speeds

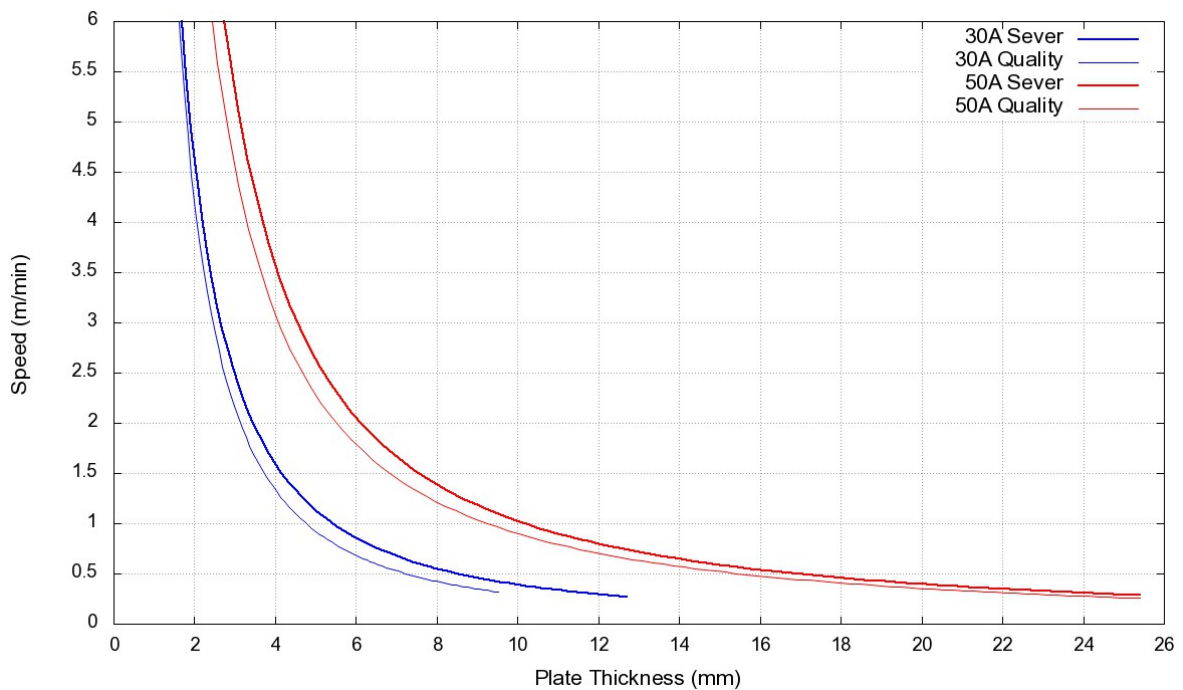

PowerCut™ 700, PT-39

Wear parts

Wear parts

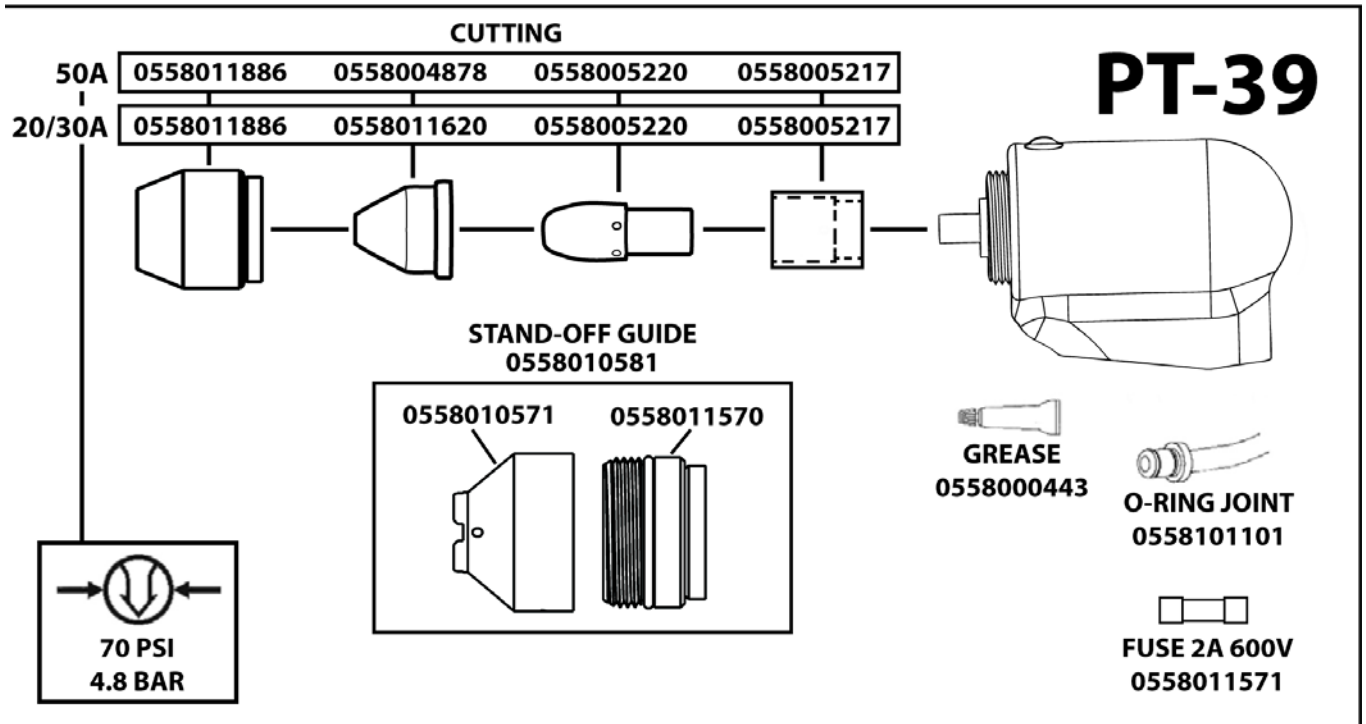

Wear parts kit PT-39

Qty	Ordering no.	Denomination	Notes
	0558 010 585	Wear parts kit consisting of:	50 Amp for PowerCut 700
3	0558 005 220	Electrode	
1	0558 005 217	Gas baffle	30 - 80 Amp
4	0558 004 878	Nozzle	50 Amp
1	0558 011 886	Retaining cup	
1	0558 010 581	Standoff guide assy	
3		O-ring	.301ID .070W Nitrile
1		Grease silicon dow	DC-111 (1/4 Oz)
1		Fuse fast-act	2A 250V



Order number



Ordering no.	Denomination	Type	Notes
0700 210 881	Power source for plasma cutting incl torch (7.6 m), return cable and wear part kit	PowerCut™ 700	400V, 3-ph
0700 210 200	Interface kit for mechanised torch PT-37		
0558 011 580	Torch	PT-39	7.6 m
0558 011 581	Torch	PT-39	15.2 m

Technical documentation is available on the Internet at www.esab.com

NOTES

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

ESAB subsidiaries and representative offices

Europe

AUSTRIA

ESAB Ges.m.b.H
Vienna-Liesing
Tel: +43 1 888 25 11
Fax: +43 1 888 25 11 85

BELGIUM

S.A. ESAB N.V.
Heist-op-den-Berg
Tel: +32 70 233 075
Fax: +32 15 257 944

BULGARIA

ESAB Kft Representative Office
Sofia
Tel/Fax: +359 2 974 42 88

THE CZECH REPUBLIC

ESAB VAMBERK s.r.o.
Vamberk
Tel: +420 2 819 40 885
Fax: +420 2 819 40 120

DENMARK

Aktieselskabet ESAB
Herlev
Tel: +45 36 30 01 11
Fax: +45 36 30 40 03

FINLAND

ESAB Oy
Helsinki
Tel: +358 9 547 761
Fax: +358 9 547 77 71

FRANCE

ESAB France S.A.
Cergy Pontoise
Tel: +33 1 30 75 55 00
Fax: +33 1 30 75 55 24

GERMANY

ESAB GmbH
Solingen
Tel: +49 212 298 0
Fax: +49 212 298 218

GREAT BRITAIN

ESAB Group (UK) Ltd
Waltham Cross
Tel: +44 1992 76 85 15
Fax: +44 1992 71 58 03

ESAB Automation Ltd

Andover
Tel: +44 1264 33 22 33
Fax: +44 1264 33 20 74

HUNGARY

ESAB Kft
Budapest
Tel: +36 1 20 44 182
Fax: +36 1 20 44 186

ITALY

ESAB Saldatura S.p.A.
Bareggio (Mi)
Tel: +39 02 97 96 8.1
Fax: +39 02 97 96 87 01

THE NETHERLANDS

ESAB Nederland B.V.
Amersfoort
Tel: +31 33 422 35 55
Fax: +31 33 422 35 44

NORWAY

AS ESAB
Larvik
Tel: +47 33 12 10 00
Fax: +47 33 11 52 03

POLAND

ESAB Sp.zo.o.
Katowice
Tel: +48 32 351 11 00
Fax: +48 32 351 11 20

PORTUGAL

ESAB Lda
Lisbon
Tel: +351 8 310 960
Fax: +351 1 859 1277

ROMANIA

ESAB Romania Trading SRL
Bucharest
Tel: +40 316 900 600
Fax: +40 316 900 601

RUSSIA

LLC ESAB
Moscow
Tel: +7 (495) 663 20 08
Fax: +7 (495) 663 20 09

SLOVAKIA

ESAB Slovakia s.r.o.
Bratislava
Tel: +421 7 44 88 24 26
Fax: +421 7 44 88 87 41

SPAIN

ESAB Ibérica S.A.
Alcalá de Henares (MADRID)
Tel: +34 91 878 3600
Fax: +34 91 802 3461

SWEDEN

ESAB Sverige AB
Gothenburg
Tel: +46 31 50 95 00
Fax: +46 31 50 92 22

ESAB international AB

Gothenburg
Tel: +46 31 50 90 00
Fax: +46 31 50 93 60

SWITZERLAND

ESAB AG
Dietikon
Tel: +41 1 741 25 25
Fax: +41 1 740 30 55

UKRAINE

ESAB Ukraine LLC
Kiev
Tel: +38 (044) 501 23 24
Fax: +38 (044) 575 21 88

North and South America

ARGENTINA

CONARCO
Buenos Aires
Tel: +54 11 4 753 4039
Fax: +54 11 4 753 6313

BRAZIL

ESAB S.A.
Contagem-MG
Tel: +55 31 2191 4333
Fax: +55 31 2191 4440

CANADA

ESAB Group Canada Inc.
Mississauga, Ontario
Tel: +1 905 670 02 20
Fax: +1 905 670 48 79

MEXICO

ESAB Mexico S.A.
Monterrey
Tel: +52 8 350 5959
Fax: +52 8 350 7554

USA

ESAB Welding & Cutting Products
Florence, SC
Tel: +1 843 669 44 11
Fax: +1 843 664 57 48

Asia/Pacific

AUSTRALIA

ESAB South Pacific
Archerfield BC QLD 4108
Tel: +61 1300 372 228
Fax: +61 7 3711 2328

CHINA

Shanghai ESAB A/P
Shanghai
Tel: +86 21 2326 3000
Fax: +86 21 6566 6622

INDIA

ESAB India Ltd
Calcutta
Tel: +91 33 478 45 17
Fax: +91 33 468 18 80

INDONESIA

P.T. ESABindo Pratama
Jakarta
Tel: +62 21 460 0188
Fax: +62 21 461 2929

JAPAN

ESAB Japan
Tokyo
Tel: +81 45 670 7073
Fax: +81 45 670 7001

MALAYSIA

ESAB (Malaysia) Snd Bhd
USJ
Tel: +603 8023 7835
Fax: +603 8023 0225

SINGAPORE

ESAB Asia/Pacific Pte Ltd
Singapore
Tel: +65 6861 43 22
Fax: +65 6861 31 95

SOUTH KOREA

ESAB SeAH Corporation
Kyungnam
Tel: +82 55 269 8170
Fax: +82 55 289 8864

UNITED ARAB EMIRATES

ESAB Middle East FZE
Dubai
Tel: +971 4 887 21 11
Fax: +971 4 887 22 63

Africa

EGYPT

ESAB Egypt
Dokki-Cairo
Tel: +20 2 390 96 69
Fax: +20 2 393 32 13

SOUTH AFRICA

ESAB Africa Welding & Cutting Ltd
Durbanvill 7570 - Cape Town
Tel: +27 (0)21 975 8924

Distributors

For addresses and phone numbers to our distributors in other countries, please visit our home page

www.esab.com



www.esab.com

